

Modern Craftsman: Charming, Simple, Soulful


Modern Craftsman maintains the charm of Craftsman, a quintessential 20th century American expression of the Arts & Crafts movement, while modernizing interior layouts. Craftsman style attributes include thick square or round columns, stone porch supports, low-pitched roofs, wide eaves and triangular brackets. It's style with soul.

We're sharing some of our favorite Modern Craftsman window and door design ideas. Bring the Modern Craftsman look to your home or project.

Browse these idea inspirations


- Modern Craftsman Entry Doors
- Modern Craftsman Interior Doors
- Modern Craftsman Patio Doors
- Modern Craftsman Windows



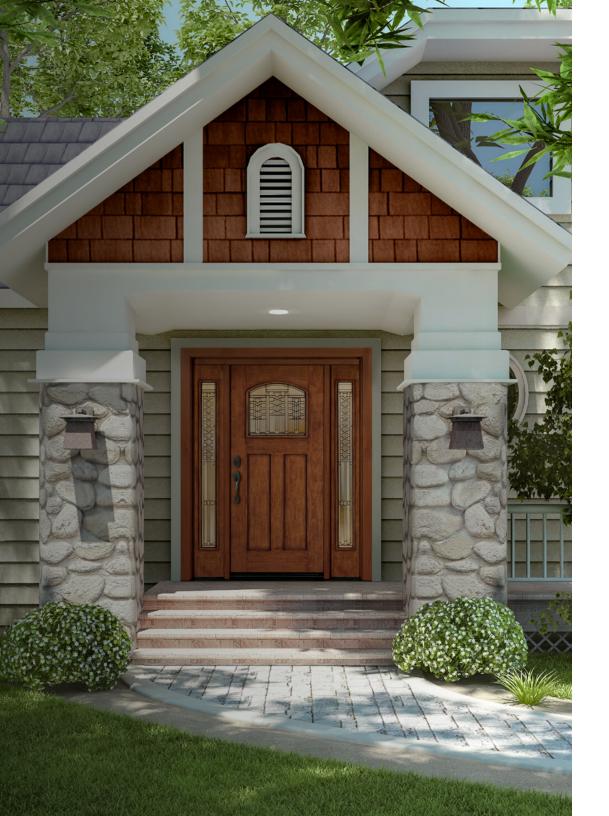

Modern Craftsman Entry Doors: An Entrance to Possibility

Front exteriors are a major element in Modern Craftsman design. With large, impressive front porches, Modern Craftsman homes employ detailed and rustic entry doors. There are so many possibilities to customize a front door. Here are a few key ideas for the Modern Craftsman look.

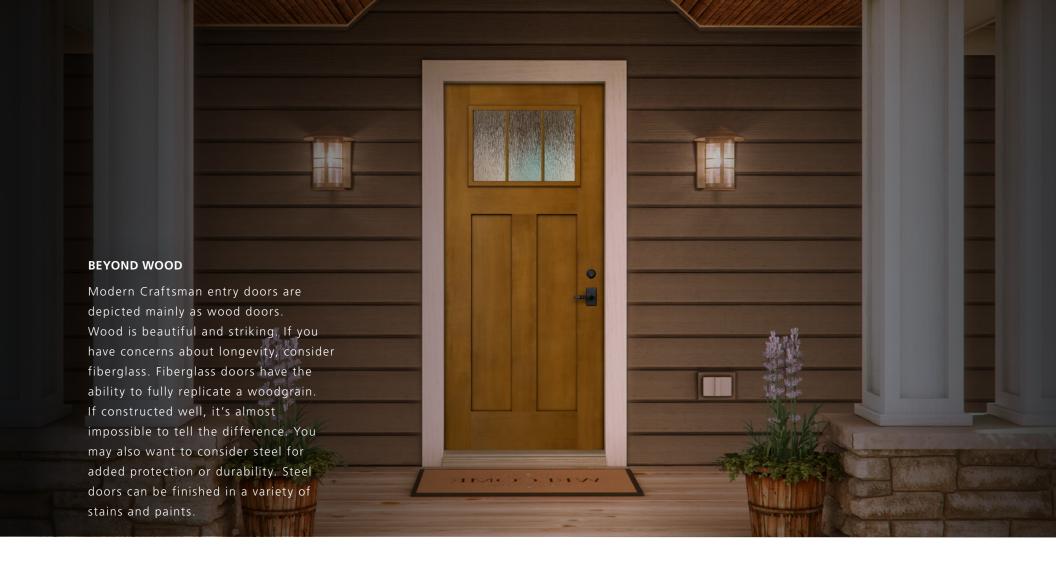

GLASS IS ILLUMINATING

Adding glass to the entry door is a great application of Modern Craftsman. There are multiple ways to blend glass into front doors. Decorative or beveled glass is most popular.

When using decorative glass, patina caming, grooved metal bars that hold textured glass, adds unique charm.

Glass configurations most representative of Modern Craftsman include:

- Large glass insert most often with prairie grills
- Top half glass with smaller solid horizontal panels
- Top third glass with vertical thin panels
- Sidelites carrying the same pattern as the paneled glass

SOMETHING EXTRA

Entry doors set the stage for a home's design. After taking in the expansive and columned porch, it's nice to add something extra to the front door. A shelf is a cool design accent, most often used under a panel. Arched doors also give the entry door a distinct look that can complement the lines of the porch pillars and supports.

Modern Craftsman Interior Doors: More than Just Functional

Interior doors are no longer just for privacy.

Interior doors can make a huge statement in
your Modern Craftsman home. Here are two ideas.





Modern Craftsman Patio Doors: Extend Your Space

Patio doors are known for extending living spaces and letting natural light into a room. A Modern Craftsman patio door will often have the same attributes as windows, including grilles and trim.

On the back exterior of a Modern Craftsman, you may have the opportunity to install a patio door. The door will more likely connect or line up to windows. Using the same grille pattern and color provides a seamless look. You get the added benefit of doors that easily open as an outswing or inswing.

Sliding doors are less prevalent in a Modern Craftsman but not unheard of. Sliding doors require less space as they don't have a swing. Grilles can be used with sliding doors as well to create a consistent look.

In most every patio door in a Modern Craftsman, you'll find a top piece with either decorative or a more intricate grille. Keep lines straight. Use diamonds or turned squares.

Also consider a multi-slide door for larger openings. These push open doors can have up to six panels equal to 10-feet high and 24-feet wide. Grilles are available to keep a uniform appearance.



Modern Craftsman Windows: Simple Touches Add Style

The exterior of Modern Craftsman homes is very distinct. Thus, your windows must look the part, as they are a big part of the exterior look of a home! Here are some looks you'll love for Modern Craftsman homes.



PRAIRIE GRILLES

Prairie grilles became popular through
Frank Lloyd Wright's Prairie School Designs.
The prairie grille is usually just four pieces
of grille. But they are not evenly spaced.
The center spaces are much larger.
The center area can be wider than the
sides as well.

They originated as long, vertical windows in groups, often vertical casement windows.

But prairie grilles are now used in most standard-size windows as well. The grille can match the color of the exterior window or be combined for something a bit

TOP ONE-THIRD GRILLES

These grilles are most often used in double-hung windows. The grille pattern represents the top one-third of the windows. This is used on upper and lower windows, although, it does not have to be consistently used. Homes will sometimes feature the top third prairie grille just on lower levels or front-facing windows. Often, it's the same design as the front door.

OPTIONS

Grilles can be simulated. They can also fit between the glass. These are called grilles-between-the-glass (GBG). GBG mean the grilles don't have exposure to the elements. They also offer an easier cleaning option.



Interior and Exterior Trim

You have options for trim on the interior and exterior. Interior trim can be finished to match any other wood element in the room like floors or cabinets. White is also a common color. With oversized molding, the white can certainly add distinction to the interior, especially if the wall color is medium to dark.

Exterior trim gives windows more depth, which is important in Modern Craftsman homes, as they often have larger shingles.

You don't want your windows to be dwarfed by other exterior elements.
You can decide to finish or paint the trim to match an accent color on your exterior. It will really make the windows pop and give additional emphasis to your grille pattern.

A thicker top molding on both the interior and exterior is also a classic Modern Craftsman look.





Decorative glass is always a possibility for windows. Deco glass is typically for smaller accent windows or top panes on a set of windows.

If you have two windows on either side of a fireplace, this is an ideal area to try deco glass. It gives definition to the windows on the exterior while adding balance to the interior.

You could also be even more bold with some colored stained glass on a long accent window in a hallway or powder room.

Deco glass is a viable alternative to grilles. You can add a row of decorative glass above front windows. A more masculine design works better for Modern Craftsman. The design on the glass should have more straight lines versus a more delicate curve.





This eBook was created by your friends at JELD-WEN as a guide to help homeowners, builders, contractors, architects and other professionals incorporate contemporary style into homes. If you'd like to learn more about us, visit us at jeld-wen.com. You can also follow us on social media for design tips, product information and much more!







© 2017 JELD-WEN, Inc. This publication and its contents are owned or licensed by JELD-WEN, Inc., its affiliates, licensors, or third parties, and are protected by copyright, trademark, and other laws. Unauthorized use or duplication is prohibited. JELD-WEN reserves the right to change product specifications without notice. Please visit our website, jeld-wen.com, for current information. All rights reserved.